

Maintenance Schedule



2024 4Runner

Mileage (km): 0 Average monthly kilometres: 1600

8000 km - June 2026

Factory Recommended

- Service #1
- Personalization
- Service Connect Verification (if equipped)

16000 km - November 2026

Factory Recommended

- Service #2
- Lubricate Propeller Shaft
- Tighten Propeller Shaft Bolts
- Inspect Block Heater (if equipped)

24000 km - April 2027

Factory Recommended

- Service #1

32000 km - September 2027

Factory Recommended

- Service #3
- Lubricate Propeller Shaft
- Tighten Propeller Shaft Bolts
- Inspect Block Heater (if equipped)

40000 km - February 2028

Factory Recommended

- Service #1

48000 km - July 2028

Factory Recommended

- Service #2
- Lubricate Propeller Shaft
- Tighten Propeller Shaft Bolts
- Inspect Block Heater (if equipped)
- Brake Fluid Replacement

56000 km - December 2028

Factory Recommended

- Service #1

64000 km - May 2029

Factory Recommended

- Service #3
- Lubricate Propeller Shaft
- Tighten Propeller Shaft Bolts
- Inspect Block Heater (if equipped)

Maintenance Schedule



72000 km - October 2029

Factory Recommended

- Service #1

80000 km - March 2030

Factory Recommended

- Service #2
- Lubricate Propeller Shaft
- Tighten Propeller Shaft Bolts
- Inspect Block Heater (if equipped)

88000 km - August 2030

Factory Recommended

- Service #1

96000 km - January 2031

Factory Recommended

- Service #3
- Lubricate Propeller Shaft
- Tighten Propeller Shaft Bolts
- Inspect Block Heater (if equipped)
- Brake Fluid Replacement

104000 km - June 2031

Factory Recommended

- Service #1

112000 km - November 2031

Factory Recommended

- Service #2
- Lubricate Propeller Shaft
- Tighten Propeller Shaft Bolts
- Inspect Block Heater (if equipped)

120000 km - April 2032

Factory Recommended

- Service #1

Certain driving habits, and some specific climatic and regional operating conditions may necessitate additional Dealer Recommended Services to protect vehicle components from premature wear and ultimately to increase their longevity..

Additional parts and labour charges may be recommended based on results of vehicle inspection. Prices include all required fluids but exclude applicable taxes, environmental handling and disposal fees. Pricing subject to change without notice..

Service details

Service #1

- Check installation of driver's floor mat.
- Inspect all lights and horn for proper operation.
- Inspect wiper blades, linkage and washers for proper operation. ¹
- Check and record tire tread depth. Examine tires for damage and uneven wear.
- Remove wheels & visually inspect brake pads, calipers, rotors, brake lines and hoses.
- Rotate tires (applicable to same size wheels, front & rear).
- Remove & inspect cabin air filter. ²
- Remove & inspect engine air filter. ³
- Inspect for leaks where applicable - engine oil, brake fluid, engine coolant, intercooler coolant, inverter coolant, power steering fluid, transmission/transaxle fluid, differential fluid, transfer case fluid, and top up windshield washer fluid.
- Visually inspect the Hybrid Battery Cooling Intake Filter (if equipped) & clean if required. ⁴
- Record inspection results, measurements and component condition on inspection form and/or repair order.
- Reset Maintenance Reminder Light or system.

Service Connect Verification (if equipped)

- Select 2020 model year and newer Toyota vehicles come equipped with Service Connect. Service Connect allows you to keep your Toyota in peak condition with Vehicle Health Reports, Warning Light Notifications and allows your Dealer to be aware of these notifications, all through the simple-to-use Toyota App. You can set or change your Preferred Dealer through the App. To manage the alerts and notifications relating to Service Connect, follow these steps: Download and sign into the Toyota App > Select your account icon in the top right-hand corner > Select Notification Settings > Select whether or not you would like push notifications or emails for warning light notifications or vehicle health reports.

Service #2

- Check installation of driver's floor mat.
- Inspect all lights and horn for proper operation.
- Inspect wiper blades, linkage and washers for proper operation. ¹
- Replace engine oil & filter.
- Check and record tire tread depth. Examine tires for damage and uneven wear.

- Remove wheels & visually inspect brake pads, calipers, rotors, brake lines and hoses.
- Rotate tires (applicable to same size wheels, front & rear).
- Remove & inspect cabin air filter. ²
- Remove & inspect engine air filter. ³
- Inspect exhaust system for leaks, damage or broken hangers.
- Check steering gear, linkage and shock absorbers for looseness, damage or leakage.
- Inspect ball joints and dust covers, driveshafts, chassis nuts & bolts for looseness or damage.
- Inspect for leaks where applicable - engine oil, brake fluid, engine coolant, intercooler coolant, inverter coolant, power steering fluid, transmission/transaxle fluid, differential fluid, transfer case fluid, and top up windshield washer fluid.
- Inspect differential and transfer case vents for obstruction.
- Visually inspect drive belts.
- Lubricate locks, latches and hinges.
- Record inspection results, measurements and component condition on inspection form and/or repair order.
- Reset Maintenance Reminder Light or system.

Inspect Block Heater (if equipped)

- Inspect Block Heater (if equipped) for operation (continuity check), cord condition, debris in bumper plug, and to ensure cartridge heater is fully inserted and clipped into the engine block.

Service #3

- Check installation of driver's floor mat.
- Inspect all lights and horn for proper operation.
- Inspect wiper blades, linkage and washers for proper operation. ¹
- Replace engine oil & filter.
- Check and record tire tread depth. Examine tires for damage and uneven wear.
- Inspect brake lines and hoses. Remove brake calipers and/or brake drums. Inspect and measure brake rotors /drums and pads/shoes.
- Rotate tires (applicable to same size wheels, front & rear).
- Remove & inspect cabin air filter. ²
- Remove & inspect engine air filter. ³
- Inspect exhaust system for leaks, damage or broken hangers.
- Inspect engine oil cooler lines and automatic transmission cooler lines if equipped for leakage, looseness or damage.

Maintenance Schedule



- Check steering gear, linkage and shock absorbers for looseness, damage or leakage.
 - Inspect ball joints and dust covers, driveshafts, chassis nuts & bolts for looseness or damage.
 - Inspect fuel system for leaks or damage, inspect condition of fuel tank band, fuel tank cap gasket, fuel tank vapour vent system hoses, fuel lines and connections.
 - Inspect for leaks where applicable – engine oil, brake fluid, engine coolant, intercooler coolant, inverter coolant, power steering fluid, transmission/transaxle fluid, differential fluid, transfer case fluid, and top up windshield washer fluid.
 - Inspect differential and transfer case vents for obstruction.
 - Visually inspect drive belts adjust tension if required.
 - Inspect valve clearance (audibly).
 - Perform a 12 volt battery health check.
 - Lubricate locks, latches and hinges.
 - Record inspection results, measurements and component condition on inspection form and/or repair order.
 - Reset Maintenance Reminder Light or system.
-

1. Additional parts charges may apply if wipers are found to require replacement during inspection. Additional labour charges may apply for installation.

2. Additional parts charge may apply if cabin air filter is found to require replacement during inspection. No additional labour charges will apply for installation.

3. Additional parts charge may apply if engine air filter is found to require replacement during inspection. No additional labour charges will apply for installation.

4. Additional parts charge may apply if Hybrid Battery Cooling Intake Filter is found to require replacement during inspection. No additional labour charges will apply for installation.